Elec/Air Shift – S, T or U Shift
221, 290, 442, 447, 489, 660 and 680 Series

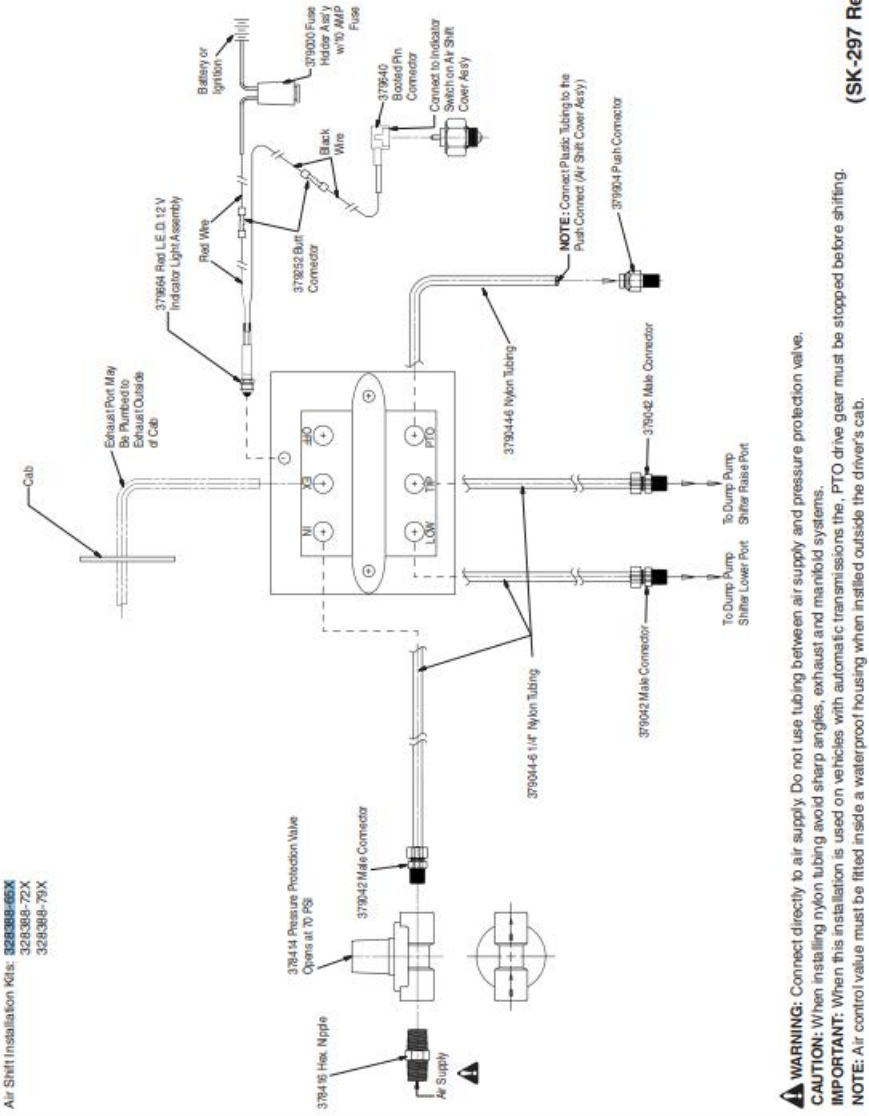

(SK-297 Rev J)

WARNING: Connect directly to air supply. Do not use tubing between air supply and pressure protection valve.
CAUTION: When installing nylon tubing avoid sharp angles, exhaust and manifold systems.
IMPORTANT: When this installation is used on vehicles with automatic transmissions the, PTO drive gear must be stopped before shifting.
NOTE: Air control value must be fitted inside a waterproof housing when installed outside the driver's cab.